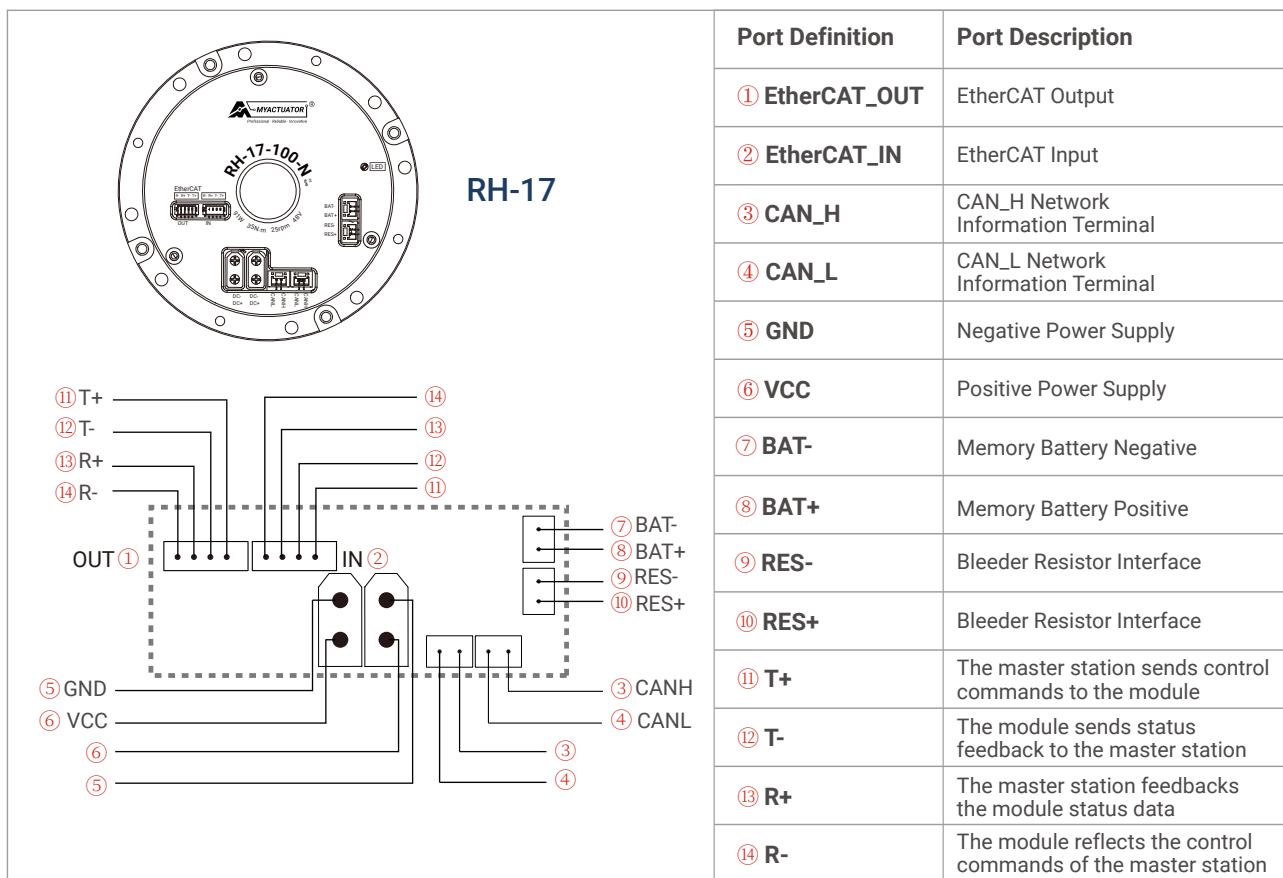 


RH-17 Interface Description



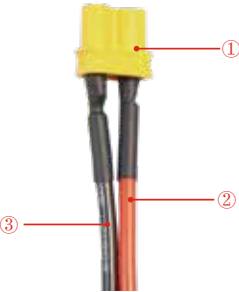 
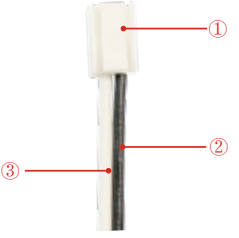 
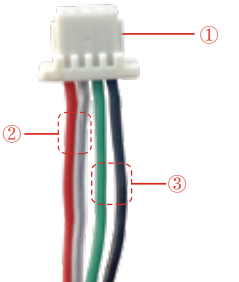 
RH-17 Packaging Information



List:

- A. Power Supply Cable *2
- B. CAN BUS Communication Cable *2 / Bleeder Resistor Cable *1 / Multi-turn battery Cable *1
- C. 120Ω Terminal Resistance *1
- D. EtherCAT Communication Cable *2
- E. CAN BUS Communication Module *1 (For each order, there will be a free USB-CAN adapter. If need more, please contact sales to buy.)

RH-17 Accessories Marking Instructions

A 	Power Supply Cable	
	① XT30(2+2) Connector	
	② Red Line	VCC Positive Power Supply
B 	CAN BUS Communication Cable / Bleeder Resistor Cable / Multi-turn battery Cable	
	① GH1.25-2P Connector	
	② Black Line	CAN_H Network Information Terminal / Negative Power Supply / Negative Power Supply
C 	120Ω Terminal Resistance	
D 	EtherCAT Communication Cable	
	① SH1.0mm(4pin) Connector	
	② T	EtherCAT Transmission Wire
E 	CAN BUS Communication Module	
	① CAN-L	CAN_L Network Information Terminal
	② CAN-H	CAN_H Network Information Terminal
	③ CAN-G	GND Ground
	④ OFF	120Ω Terminal Resistance
	⑤ ON	120Ω Terminal Resistance

Notes: For each order, there will be a free USB-CAN adapter. If need more, please contact sales to buy.